



PREPARATION: Check the door to be used is swinging and closing freely before installing the **Door Closer.**


RECOMMENDED FITTING: Select the inside face of the door to be used and proceed with the five steps shown.

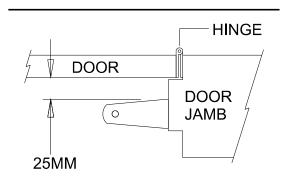

Place the Jamb Bracket on the hinged side of the door jamb, 25mm from the face of the door and 40mm down from the top of the door. Fasten the Jamb Bracket with the three 25mm screws provided.

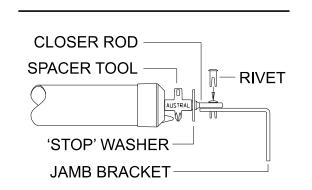


Place the **Stop Washer** over the **Rod** and place the **Rod** onto the **Jamb Bracket**. Slip the forked **Rivet** supplied through both. <u>**Do not**</u> deform the legs of the **Rivet** or remove the **Spacer Tool** at this stage.




- ROTATE DOOR PLATE

• Fit the **Door Plate** onto the **Closer Foot** as shown above. With the door fully closed and the latch engaged, swing the **Closer** and **Door Plate** onto the door in a level position

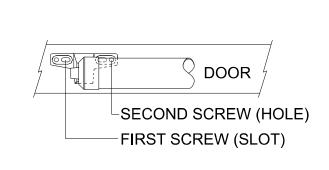

And drill a 3mm hole at this mark. Fasten the **Door Bracket** with one **12mm Screw**. Remove the **Closer** (jamb end first) and drill through the second screw hole. Fit the second **12mm Screw** in the **Door Bracket** and refit the **Closer**.

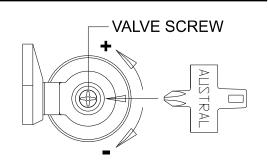

• Open the door, remove the **Spacer Tool** from the **Closer Rod**. Test the **Closer** and adjust the **Valve Screw** with **Spacer Tool** to control the closer speed. Deform the **Rivet** with the back of the **Spacer Tool**.